


Guidance Note 4 – Typical Connections to AquaCell Units


Connection for soakaway application using either the pre-formed socket (as shown below) or standard adaptors into pre-formed socket*

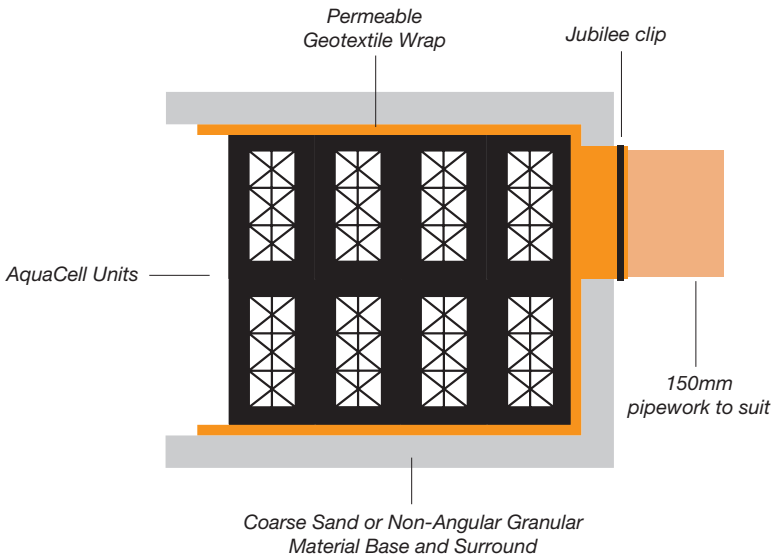

*NOTE: For pipework other than 160mm OsmaDrain, these adaptors can be used to connect to the following:

- 6TW141: TwinWall S/S Adaptor connects to 150mm TwinWall
- 6D099: OsmaDrain Adaptor connects to 110mm OsmaDrain
- 4D916: OsmaDrain PE Adaptor connects to 160mm OsmaDrain
- 6UR141: UltraRib S/S Adaptor connects to 150mm UltraRib
- 6D129: OsmaDrain S/S Adaptor connects to 150mm SuperSleve clay. (Use an appropriate reducer, as required, e.g. 6D099)

Connection for storage application using Flange Adaptor at points other than pre-formed socket, (for AquaCell Prime, Core or Plus).

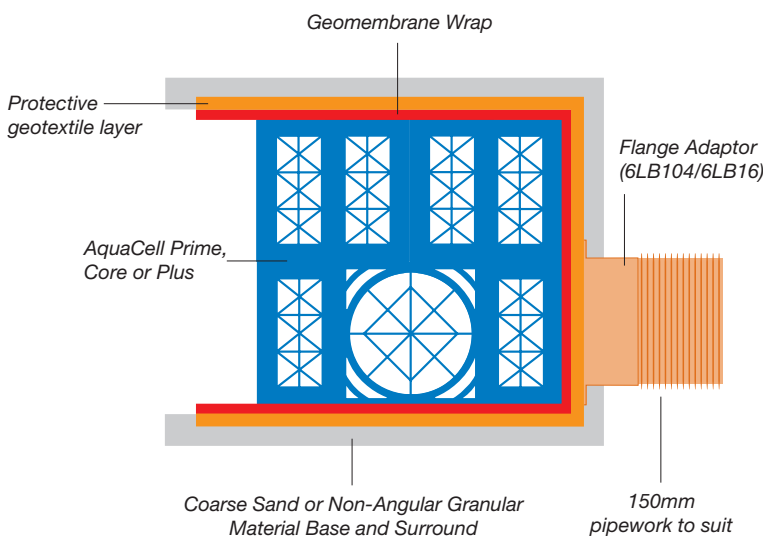

Installation Procedure

1. Fix Flange Adaptor to the AquaCell unit with self tapping screws.
2. Cut through the geomembrane.
3. Insert pipework into Flange Adaptor.

*NOTE: AquaCell Eco is not suitable for side connection using a Flange Adaptor.